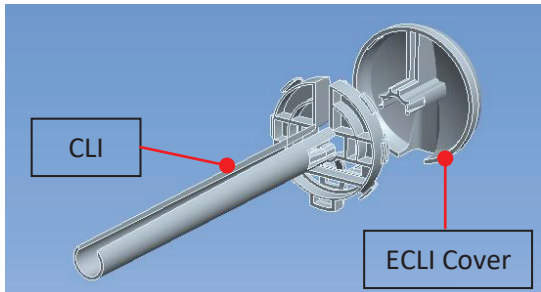
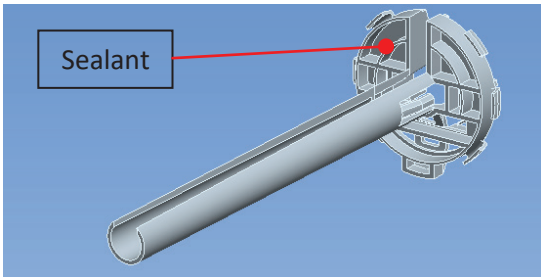
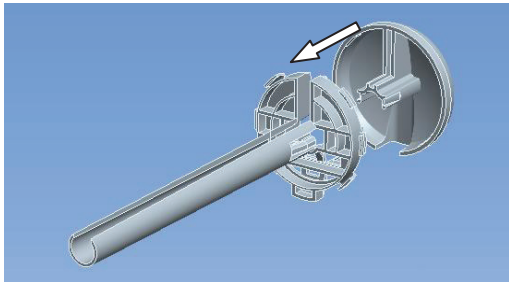


EXTERNAL CUSTOMER LEAD IN

Installation Instructions

1	Unpack the External Customer Lead In which consists of: • External CLI Cover (grey) • CLI	
2	Apply a bead of Sealant Silicone (Clear) to the wall facing shoulder of the External CLI as shown, ensure a full circle sealant is applied.	
3	Push the External CLI onto the protruding protection conduit and push the assembly into the wall until as flush to the wall as possible.	Tip: Always run the Customer Premises Cable vertically downwards from the External CLI.
4	Carefully apply the External CLI Cover by aligning the output port with the Customer Premises Cable and push fully home until positively clipped.	
5	Staple the Customer Premise Cable around the premises to the External CSP position. Use Staple Cable 3/8 Inch White or Cleat Wiring 11B Black to secure the Customer Premise Cable.	Tip: Leave the last few fixings close to the External CSP until all work in the External CSP is complete.

End of Document