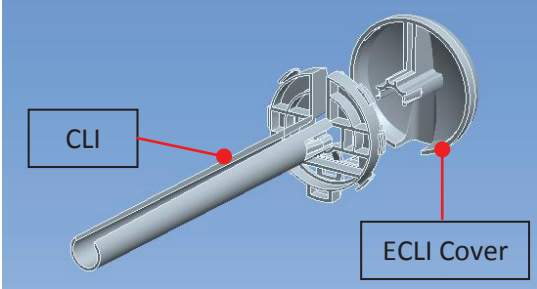
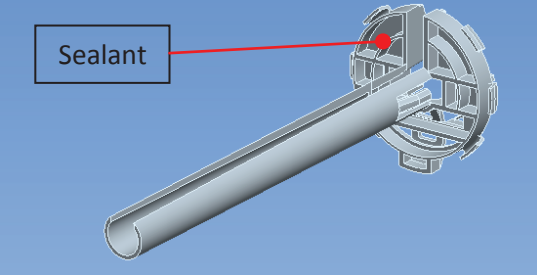
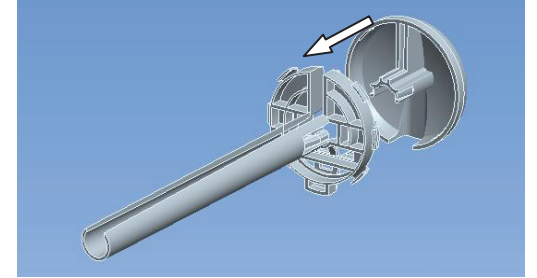


EXTERNAL CUSTOMER LEAD IN

Installation Instructions

1	<p>Unpack the External Customer Lead In which consists of:</p> <ul style="list-style-type: none"> • External CLI Cover (grey) • CLI 	 <p>The diagram shows a grey cylindrical CLI and a grey ECLI Cover. Red lines point from labels 'CLI' and 'ECLI Cover' to their respective parts.</p>
2	<p>Apply a bead of Sealant Silicone (Clear) to the wall facing shoulder of the External CLI as shown, ensure a full circle sealant is applied.</p>	 <p>The diagram shows the CLI with a red bead of sealant applied to the shoulder of the wall-facing side. A label 'Sealant' points to the bead.</p>
3	<p>Push the External CLI onto the protruding protection conduit and push the assembly into the wall until as flush to the wall as possible.</p>	<p><i>Tip: Always run the Customer Premises Cable vertically downwards from the External CLI.</i></p>
4	<p>Carefully apply the External CLI Cover by aligning the output port with the Customer Premises Cable and push fully home until positively clipped.</p>	 <p>The diagram shows the CLI cover being pushed onto the CLI. A white arrow points to the cover, indicating the direction of application.</p>
5	<p>Staple the Customer Premise Cable around the premises to the External CSP position. Use Staple Cable 3/8 Inch White or Cleat Wiring 11B Black to secure the Customer Premise Cable.</p>	<p><i>Tip: Leave the last few fixings close to the External CSP until all work in the External CSP is complete.</i></p>

End of Document