

**INSTALLATION INSTRUCTION
FTTP CUSTOMER CONNECTION KIT**

Installation Instructions for Customer Splicing Point

<p>The following procedures should be carried after Steps 19 or 59 of EPT/COF/D888 - Customer Splicing Point (CSP) Installation Instructions</p>	
<p>Access the Customer Splicing Point in the normal manner ensuring all the relevant safety procedures are adhered to.</p> <p>Note the External CSP may have already been fitted to the wall</p>	
<p>Remove the cover and loosen the cover fixing screws, do not remove them, and open the Splice Tray by pushing the two tabs in the direction shown</p>	
<p>Remove the Splice Tray Module assembly from the Back Box by pushing the two tabs as shown</p>	
<p>Remove the adaptor clip by moving from front to back until it breaks off</p> <p>Plug one end of the red high friction tube into the 3mm collet of the 6mm – 3mm Straight Connector</p>	
<p>Feed the other end of the red tube under the tab on the underside of the opened Splice Tray as shown</p>	
<p>Adjust the position such that the 6mm collet of the 6mm – 3mm Straight Connector lines up with the lower face of the cut out as shown opposite and below</p> <p>Tip: If the red tube is too short to allow the Gas Block Connector to sit correctly on the splice tray then the tube position can be adjusted at this point</p>	
<p>Route the Red 3mm High Friction Tube as shown</p>	
<p>Continue to follow the relevant installation from Steps of EPT/COF/D888 - Customer Splicing Point Installation Instructions Step 20 & Step 60</p>	

**INSTALLATION INSTRUCTION
FTTP CUSTOMER CONNECTION KIT**

The contents of the FTTP Customer Connection Kit are split into two parts, one part for use in the Fibre Distribution Point and the second part for use in the Customer Splicing Point.

The FTTP Customer Connection Kit contains the components required to complete the following functions;


- tube outside diameter reduction
- a locking system for the Blown Fibre Bundle at both ends of the customer drop span
- a Water Block in the Fibre Distribution Point
- a Gas Block in the Customer Splicing Point

CUSTOMER CONNECTION KIT CONTENTS

Fibre Distribution Point

- 1 off 4mm – 3mm Straight Tube Connector
- 1 off Red 3mm x 500mm Long High Friction Tube
- 1 off Fibre Locking Spiral
- 1 off Fibre Water Block

Note; The Fibre Water Block, Fibre Locking Spiral and red 3mm High Friction Tube will be supplied pre-assembled as shown in Figure 1

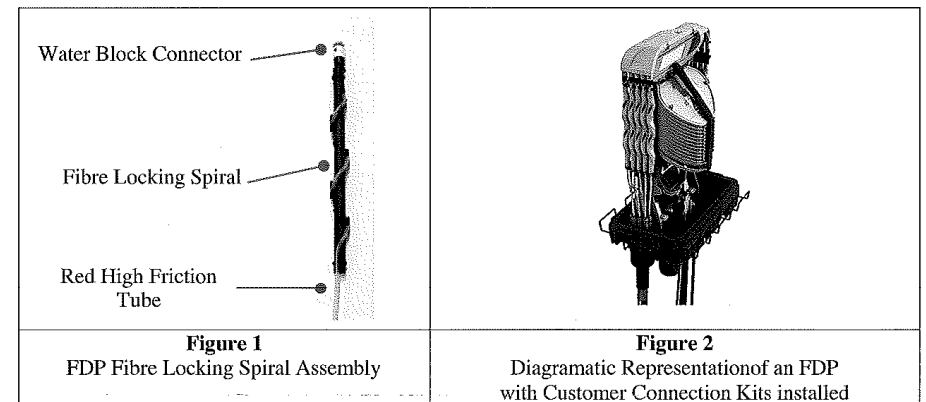

Customer Splicing Point

- 1 off 6mm - 3mm Straight Tube Connector
- 1 off Red 3mm x 752mm Long High Friction Tube
- 1 off Fibre Retaining Gas Block

Other Installation Instructions Required

EPT/COF/D888 - Customer Splicing Point (CSP) Installation Instructions
EPT/COF/D887 - Fibre Distribution Point (FDP) Installation Instructions